

Signicade A-Frame

Product Parts

- 1 - Frame
- 2 - Ballast Plug
- 3 - Hook/Loop 24"
(2 Hook strips / 2 Loop Strips per panel)



Sign Install

A sign can be applied to both sides of your display by using any of the following methods:

- Adhesive-Backed Hook & Loop (Included)
- Well Nuts (Sold Separately)



Well Nut

Display Setup

Step 1

Use the handle to carry display to desired location. Pull the front and back of the folded Frame (1) apart to create an A-Frame that can stand on its own.



Step 2

Pull the Ballast Plug (2) out to open the ballast fill hole. Fill with water or sand for ballast. Ballast can be added to both sides.



Step 3

Affix included hook/loop (3) to back of graphic at top and bottom.

Signicade A-Frame

Graphic Install Using Well Nuts (Sold Separately - in pkgs of 20 Item #WN20)

Step 1



Drill 6 - 1/2" holes into the frame in the desired location to attach the graphic. Insert the well nuts into the pre-drilled holes.



6 - Well Nuts with Screws





Step 2

Screw bolt into well nut until it expands like a molly in drywall. Remove the screw and you now have a permanent screw receptacle enabling easy graphic replacement.

Step 3

Position the sign on the frame to determine where holes need to be on the sign to line up with well nuts. Drill 1/4" holes in Sign for Bolt. Screw sign to frame(1).

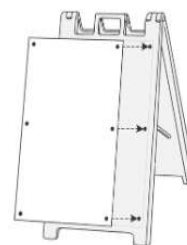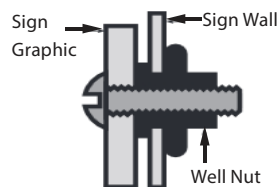

Storage

Store in a cool dry location.

Care

To clean, wipe with damp cloth.