Formulate 20' Serpentine - Kit 1

FMLT-WSC20-01

Formulate® is a collection of sophisticated, ergonomically designed exhibit booths. Formulate combines state-of-the-art zipper pillowcase dye-sublimated fabric coverings with advanced lightweight aluminum structures to provide unique design, functionality and style. The excellence of the Formulate line of displays, hanging structures and products is simply unmatched. Stretch fabric graphics are hand-sewn, durable and dry-cleanable.



features and benefits:

- State-of-the-art 50mm aluminum tubing with heavy duty internal spigot connectors
- Easy to store and ship
- Quick to set up

- Kit includes: one frame, one dye-sublimated zipper pillowcase graphic, and two wheeled molded storage cases
- Lifetime hardware warranty against manufacturer defects

dimensions:


difficultions.	
Hardware	Graphic
Assembled unit: 227"w x 92"h x 36"d 5766mm(w) x 2337mm(h) x 915mm(d) Approximate weight: 62 lbs / 29 kgs	Refer to related graphic template for more information. Visit: www.exhibitors-handbook.com/ graphic-templates
Shipping	additional information:
Packing case(s): 2 OCL Shipping dimensions: 56" x 19"h x 19"d	Graphic material: Dye-sublimated zipper pillowcase fabric Optional accessories:
1422mm(l) x 483(h) x 483mm(d)	Lumina 8-50 watt halogen lighting, literature pocket, stand-off literature rack, stand-off graphic shelf, graphic header, larger freight cases
Approximate shipping weight: 104 lbs / 47 kgs	
	When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided.
	2 person assembly recommended:

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.







Included In Your Kit

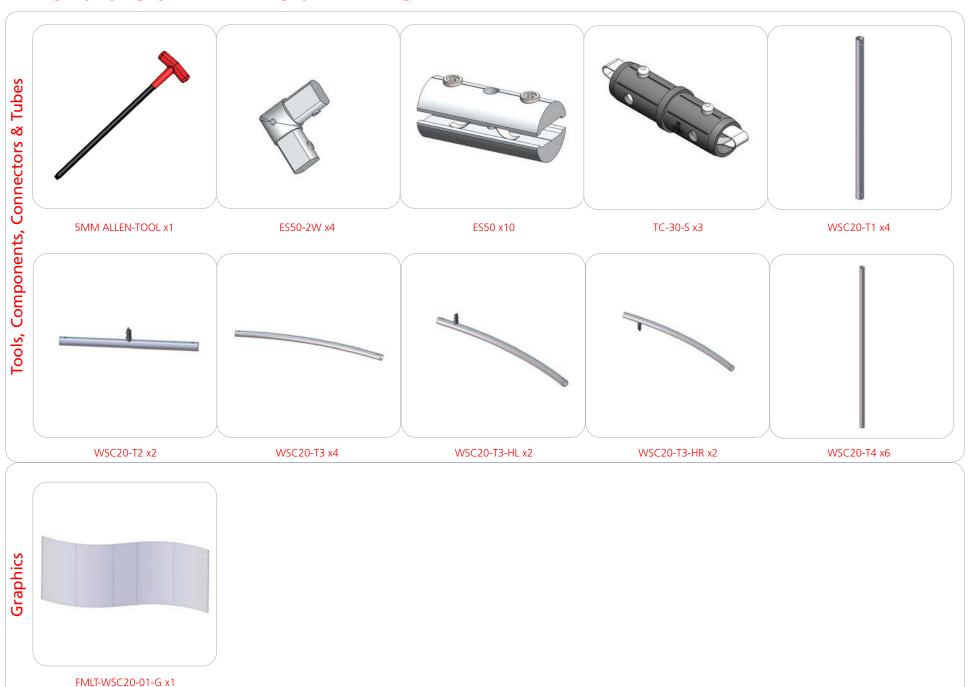

Exploded View

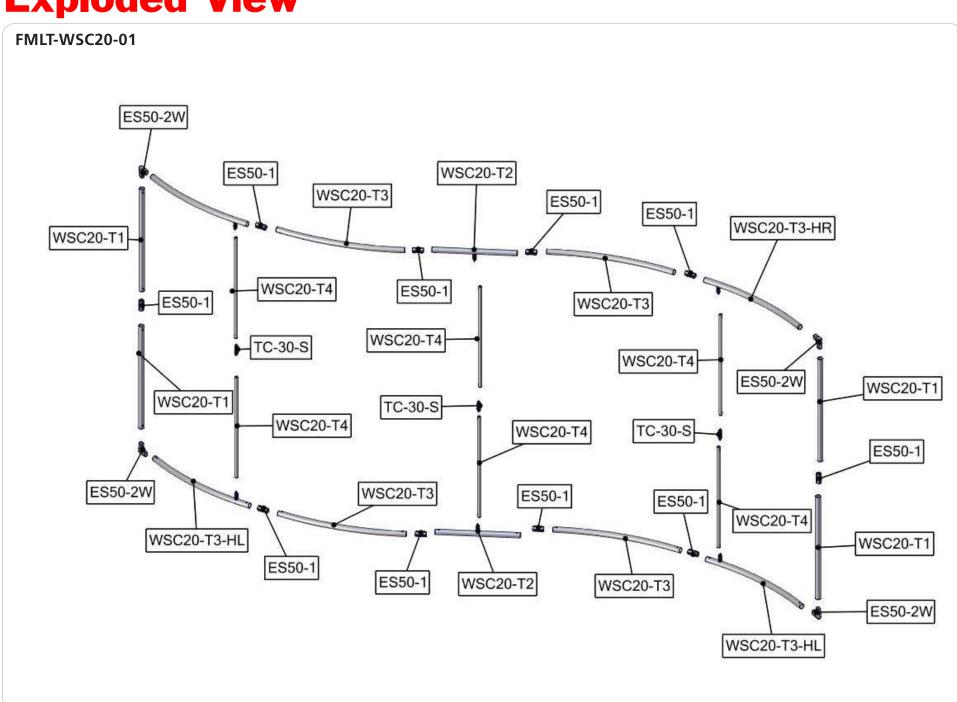


Labeling Diagram

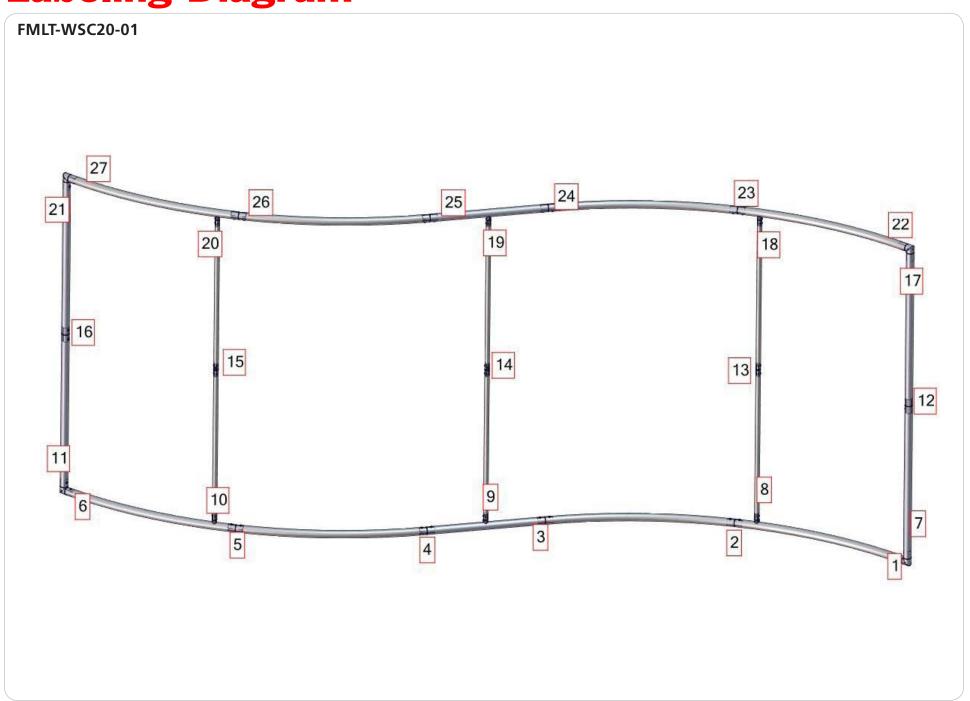


Connection Methods

Connection Method 1: ES30 / ES50 / SNAP BUTTONS-

Connection Method 2: ES50-2W-

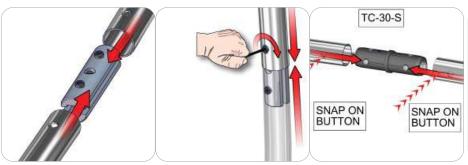

For spigot connections, compress the unlocked connector and slide into the tube lock access hole. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not over tighten. turning the internal screw counter clockwise. Second, compress the connector end and slide it into For snap button connections, locate the snap button on the connector or swage tube. Locate the hole on the corresponding tube. Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.

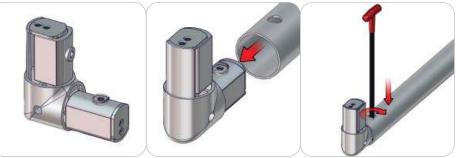

First, check if the connector ends compress. If they do not compress, use the allen key tool for the tube. Align the connector end button with the tube hole untill it pops out. Third, use the allen key tool for turning the internal screw clockwise for a secure fit. Be sure to lock securely, but do not overtighten.


Kit Assembly


Step by Step

Step 1.

Gather the components laid out on the floor to build the frame. Use the Exploded View and the Labeling Diagram for part labels.

Reference Connection Method(s) 1 and 2 for more details.




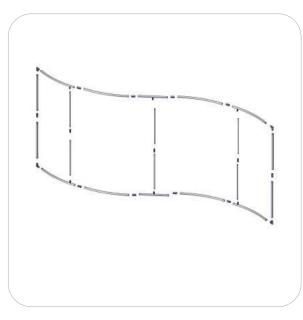

Step 2.

With the frame laid out on the floor, apply the graphic pillowcases over the frame from the top and then zipper around the bottom edge. Stand the unit upright.



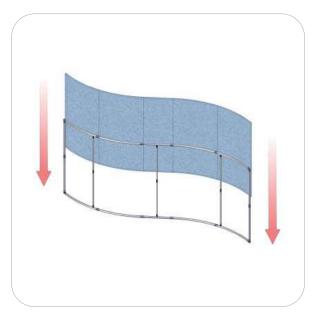

Step 3.

Setup is complete.

