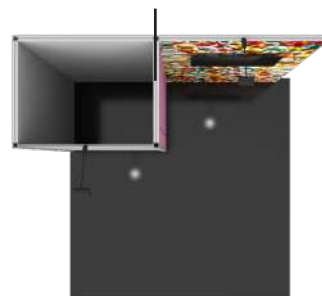# Vector Frame Master 10ft Modular Backwall Kit 25

VF-K-25

The 10ft x 10ft inline Vector Frame™ Kit 25 is an innovative and contemporary exhibit that provides a sleek appearance and excellent features and functionality. Kit 25 couples vibrant, dye-sublimated push-fit fabric graphics with simple extrusion frames. Kit 25 inlcudes accent lighting, a monitor mount, an entire slot wall to hang merchandise from and lockable closet for storage.

features and benefits:

- 50mm silver extrusion frame
- Single-sided SEG push-fit fabric graphics
- 3'w x 4'd Storage closest for convenient storage with locking door
- Monitor mount supports 32"-55" monitors with a 40 lb. max capacity

- Two Lumina 2 LED lights
- Slot wall for product display
- Ships freight in a wood crate
- Slot wall has a 30 lb. max capacity
- Lifetime hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 110.24"w x 94.49"h x 39.37"d 2800mm(w) x 2400mm(h) x 1000mm(d) Approximate weight: 315 lbs / 142 kg	Refer to related graphic template for more information. Visit: https://www.theexhibitorshandbook.com/download-graphic-templates

Shipping	additional information:
Packing case(s): 1 HALF-WOODCRATE Shipping dimensions: WOOD-CRATE: 101"l x 31"h x 52.75"d 2566mm(l) x 788mm(h) x 1340mm(d) Approximate total shipping weight: 583 lbs / 264 kg	Graphic material: Dye-sublimate SEG push-fit fabric grapihcs When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided. Lighting Power Requirements:

Door located on this wall

Total wattage needed: 24 watts	Total ampage needed: 2.4 amps	Voltage used: 100-240 volts

This product may include the following materials for recycle:
aluminum, select wood, fabric, cardboard, paper, steel, and plastics.

2 person assembly recommended:
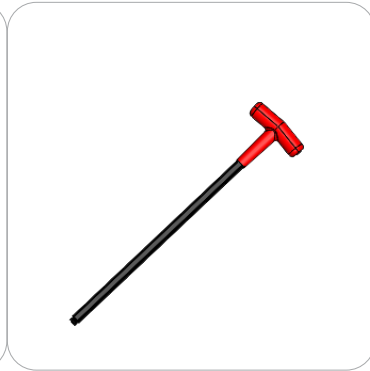
12/26/2019

Included In Your Kit

Tools, Components, & Connectors
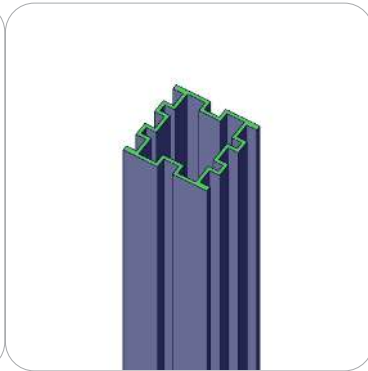
HEX-KEY-SET x1

FABRIC STEAMER-ES x1
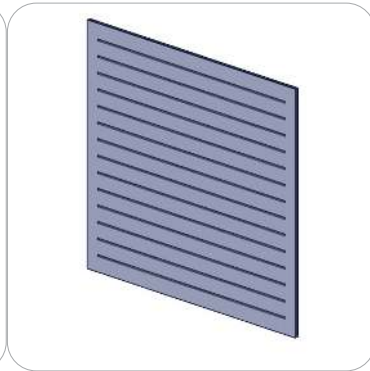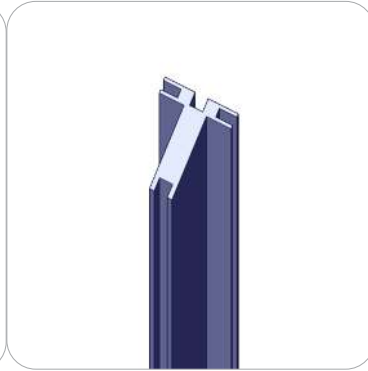
5MM-ALLEN-T x1

VF-FCDOOR-50MM-900-L x1

LUM-LED2-ORL-B x2
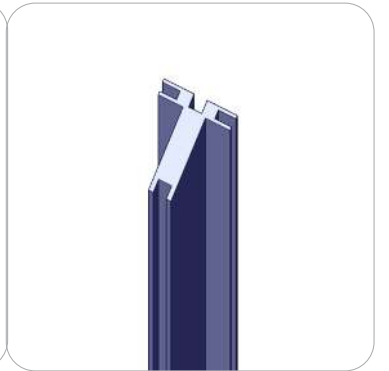
PHFC2-2400-MCB9-MCB9-SIDE x3
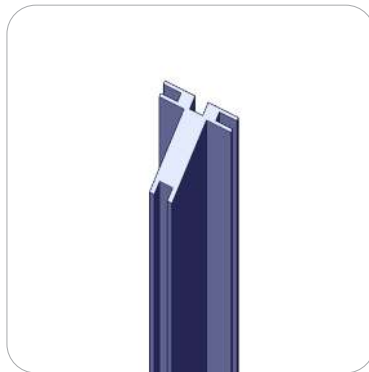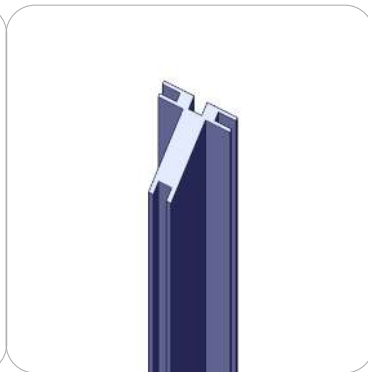
PM2S2-2400 x4

PS-1200-1200 x2

PHFC2-900-MCB9-MCB9 x2
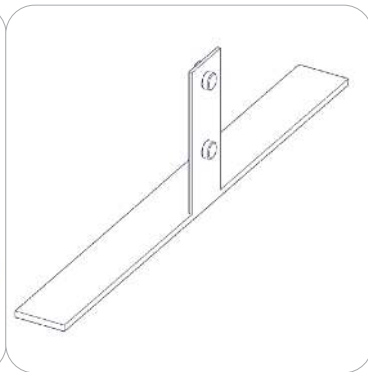
PHFC2-2400-MCB9-MCB9 x1

PHFC2-1200-MCB9-MCB9 x2

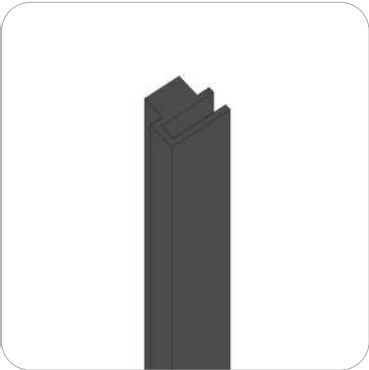PHFC2-1500-MCB9-MCB9 x2

PHFC2-900-L-L x2

SW-FOOT-500-LN x1

CB9 x8

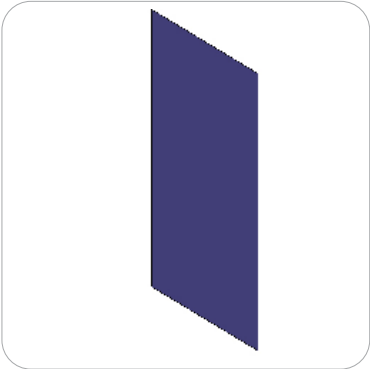# Included In Your Kit

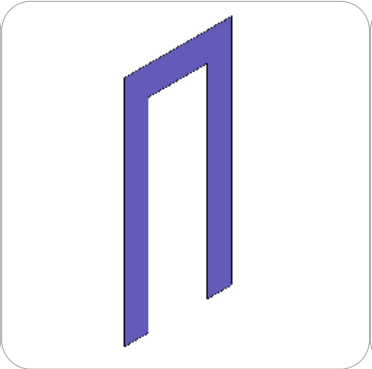FREESTANDING-SPLIT-MM-2 x1

FC-2386 x8

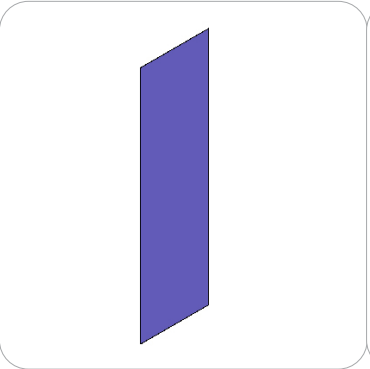Tools, Components, & Connectors

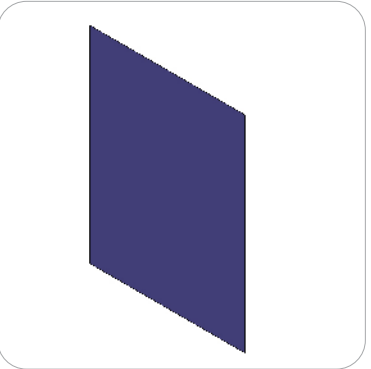# Included In Your Kit

Graphics

VF-K-25-A-G x1

VF-K-25-B-G x1

VF-K-25-C-G x1

VF-K-25-D-G x1

Interior Liners
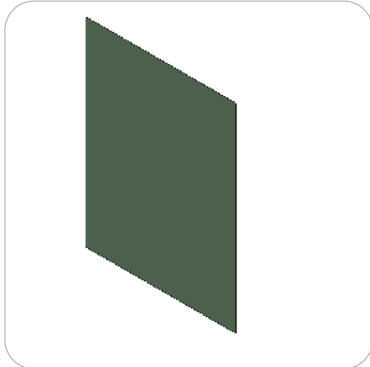
VF-K-25-J-G x1
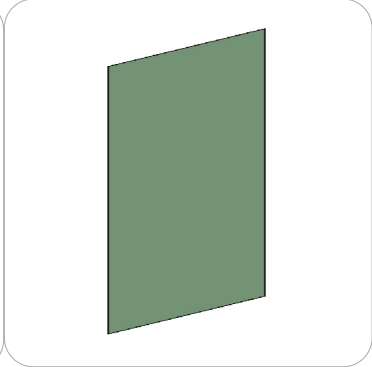
VF-K-25-I-G x1

VF-K-25-E-G x1

VF-K-25-G-G x1
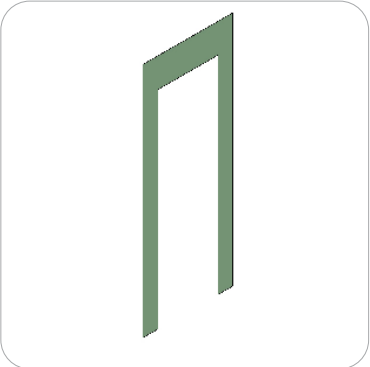
VF-K-25-F-G x1

VF-K-25-H-G x1

Kit Components

VF-K-25
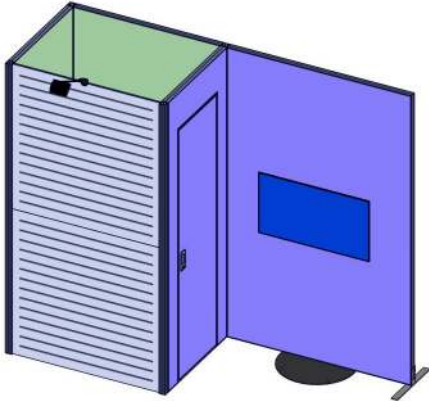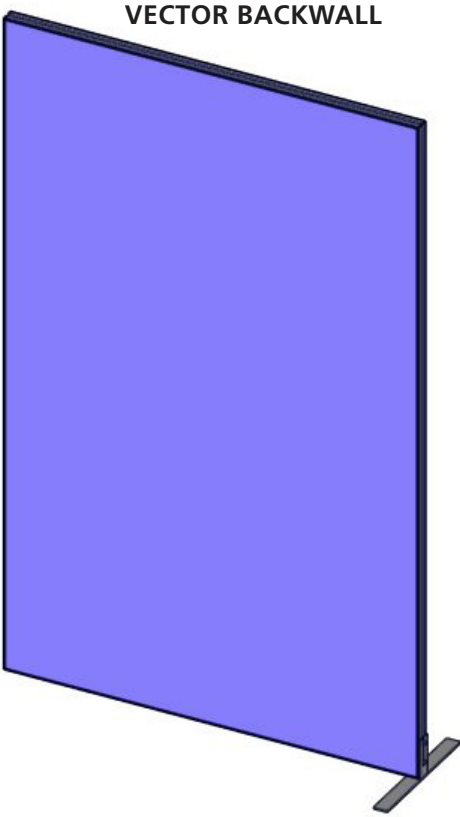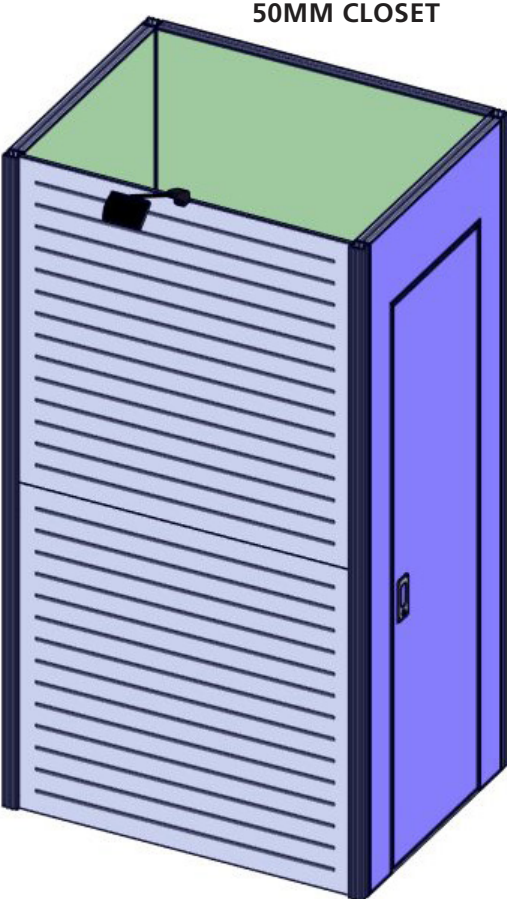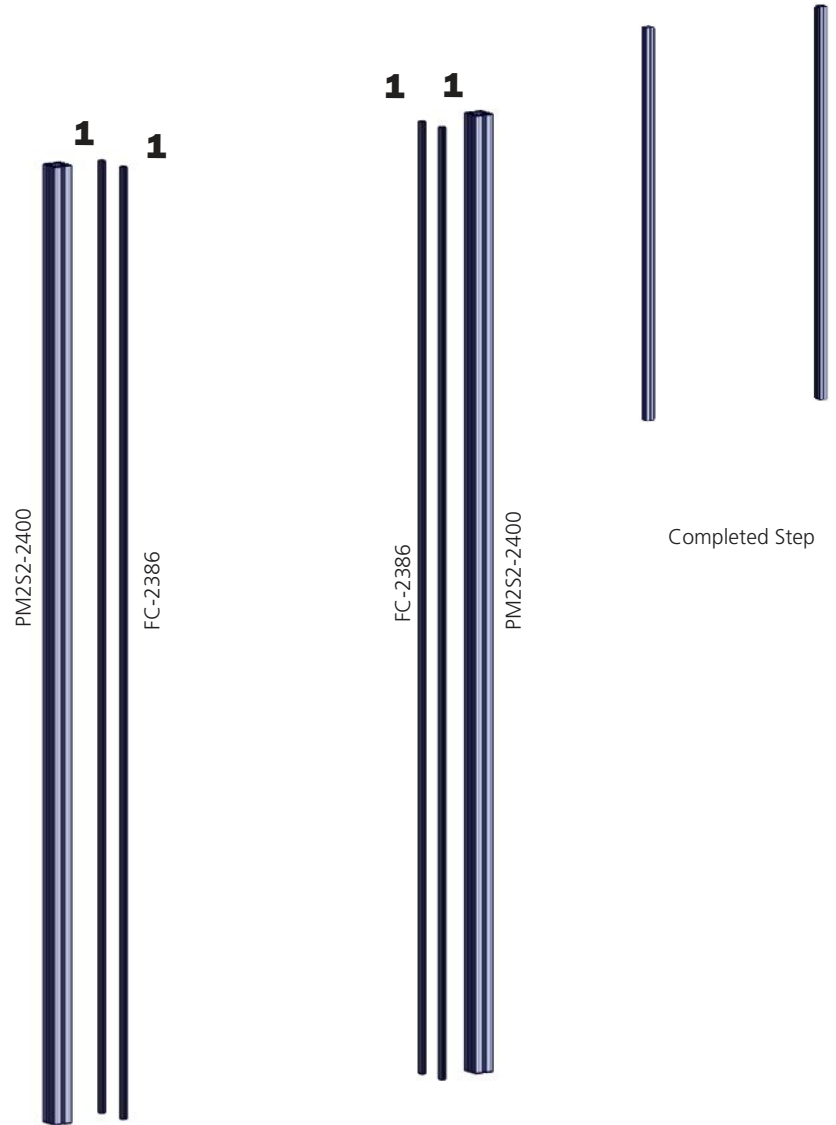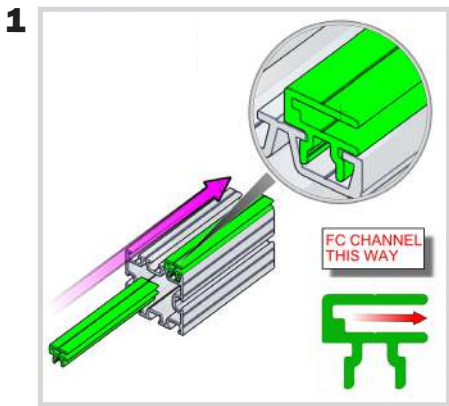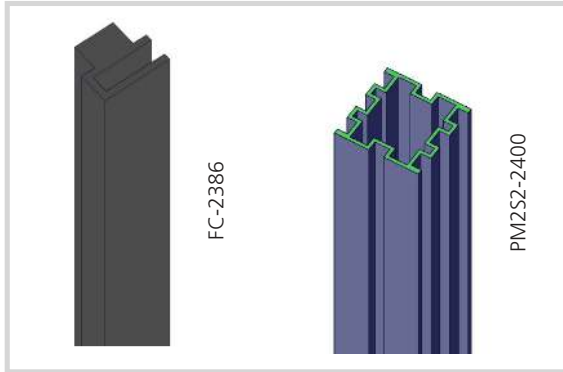
50MM CLOSET

VECTOR BACKWALL

FREESTANDING-SPLIT-MM-2

Closet Assembly

For this step you will need:

FC-2386

PM2S2-2400

1

Slide FC Channels into the outside channels of the PM2S2 facing the door frame.

FC CHANNEL THIS WAY

1 **1**

PM2S2-2400

FC-2386

1 **1**

FC-2386

PM2S2-2400

Completed Step

Closet Assembly
For this step you will need:

VF-FCDOOR-50MM-900-L

PM2S2-2400

2

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

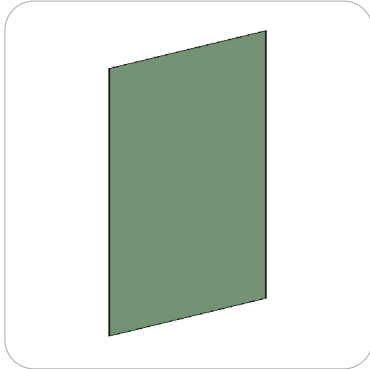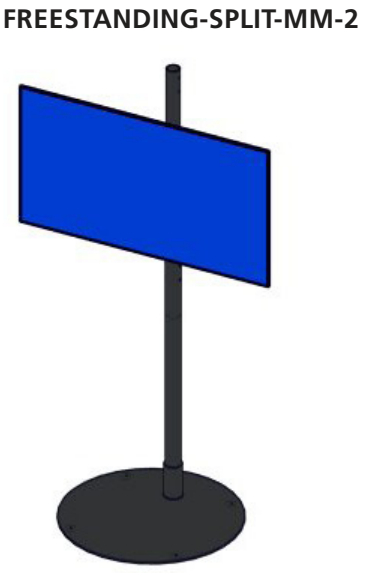LOCK EXTRUSION BY USING 5MM ALLEN KEY

Using the 5mm Allen-T attach the PHFC2s at the top and bottom of your door frame to two of your PM2S2s.

3

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

LOCK EXTRUSION BY USING 5MM ALLEN KEY
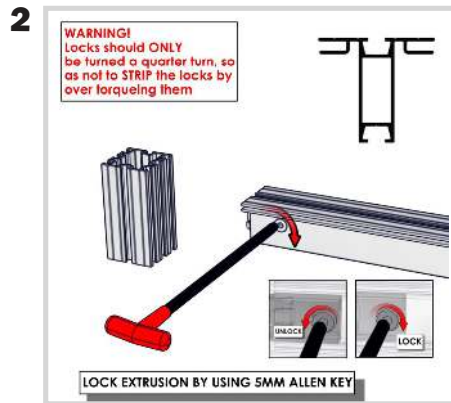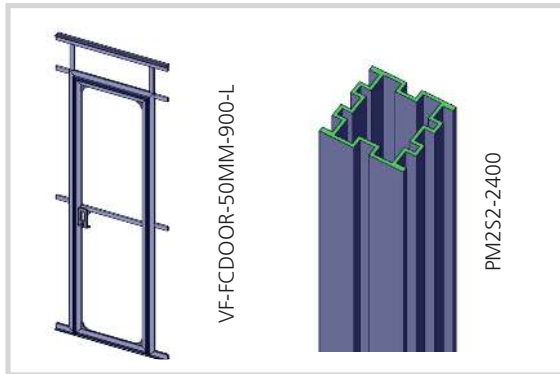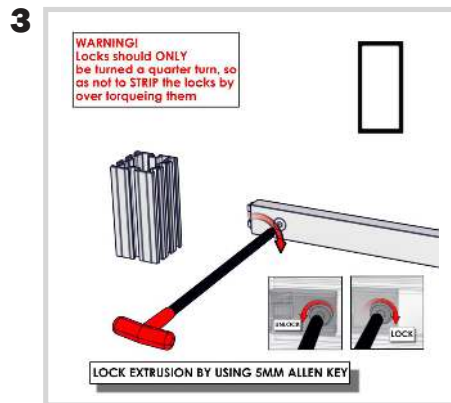
Using the 5mm Allen-T attach the PH1s on your door frame to two of your PM2S2s.

2
3
2
3
3
3
3
2
2
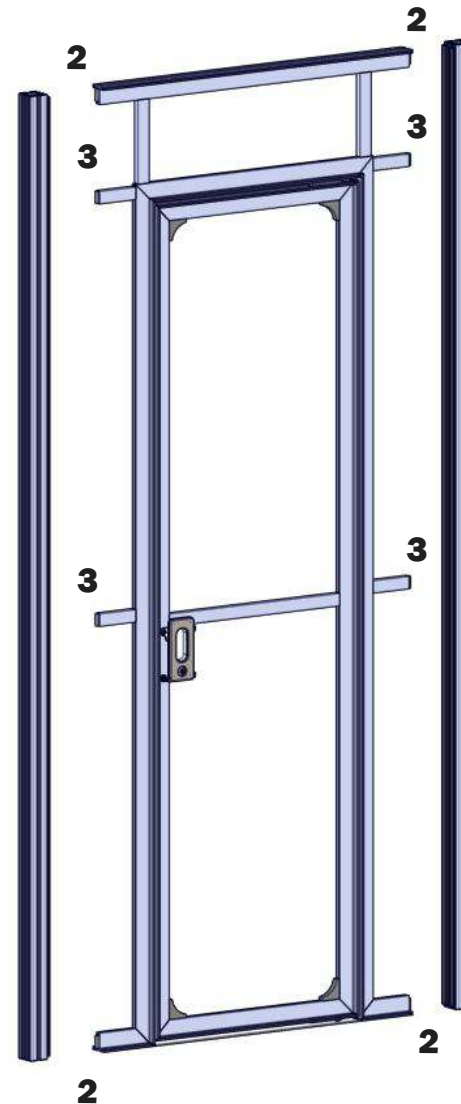
Completed Step

Door frame comes assembled
DO NOT DISASSEMBLE

Closet Assembly

For this step you will need:

PHFC2-2400-MCB9-MCB9

PHFC2-1200-MCB9-MCB9

CB9

4

CB9

1-

SLIDE CB9 TOGETHER WITH EXTRUSION.
2-THEN TIGHTEN THE SCREWS TO LOCK EXTRUSION TOGETHER.

UNLOCK   LOCK

LOCK

8MM ALLEN KEY
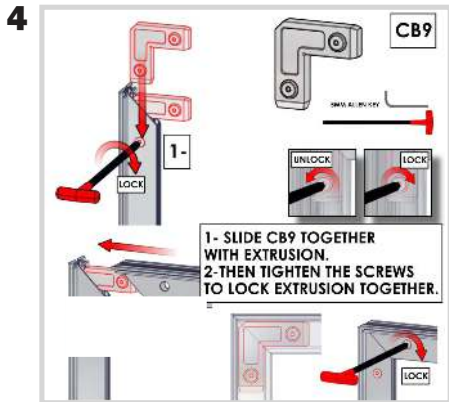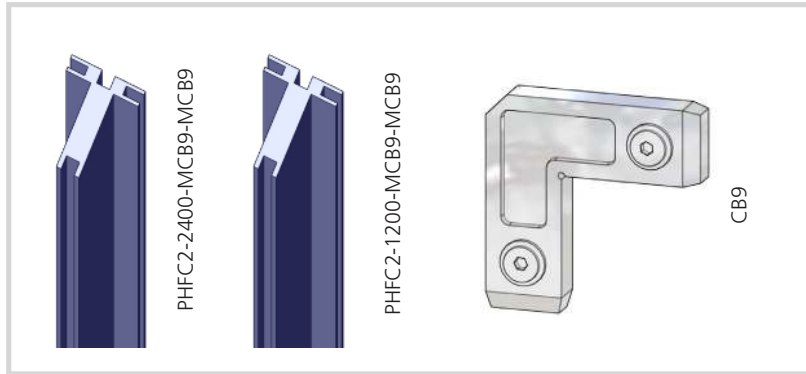
Attach the back frame of the closet together using the Allen Tool and the CB9 Connectors.

4 PHFC2-1200-MCB9-MCB9 **4**

PHFC2-2400-MCB9-MCB9

PHFC2-2400-MCB9-MCB9

4 PHFC2-1200-MCB9-MCB9 **4**

Completed Step

Closet Assembly

For this step you will need:

PHFC2-2400-MCB9-MCB9

PM2S2-2400

5

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

These will attach the PHFC2 to the side of the PMFC2. So you can connect your completed door frame with the back frame.

5

5

Completed Step

Closet Assembly

For this step you will need:

PM2S2-2400

PHFC2-900-L-L

FC-2386

6

SLIDE FC INTO CHANNEL

FC CHANNEL THIS WAY

Slide FC Channels into the outside channels of the PM2S2 facing the door frame.

7

WARNING!
Locks should ONLY be turned a quarter turn, so as not to STRIP the locks by over torqueing them

UNLOCK   LOCK

LOCK EXTRUSION BY USING 5MM ALLEN KEY

Using the 5mm Allen-T attach the PHFC2s at the top and bottom of your door frame to two of your PM2S2s.

7 PHFC2-900-L-L **7**

PM2S2-2400

6

FC-2386

6

FC-2386

PM2S2-2400

Completed Step

7 PHFC2-900-L-L **7**

Closet Assembly

For this step you will need:

PHFC4-2400-MCB9-MCB9

PM2S2-2400

8

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

These will attach the PHFC2 to the
side of the PMFC2. So you can
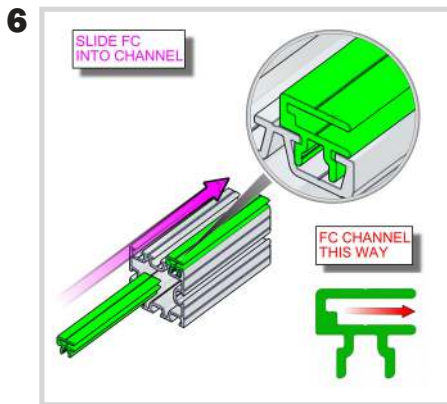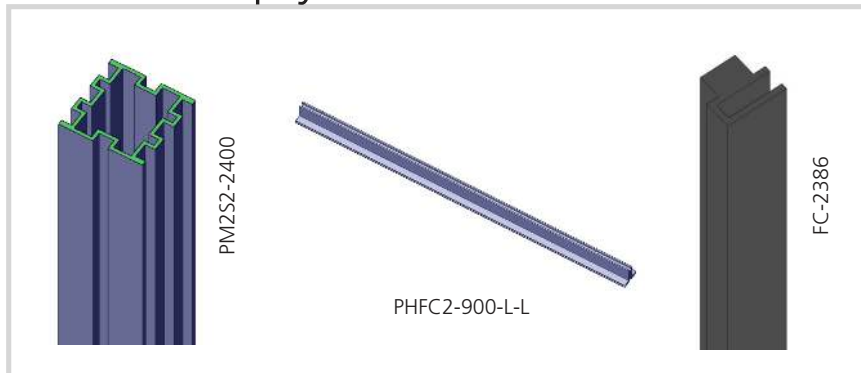connect your completed door
frame with the back frame.

8

8

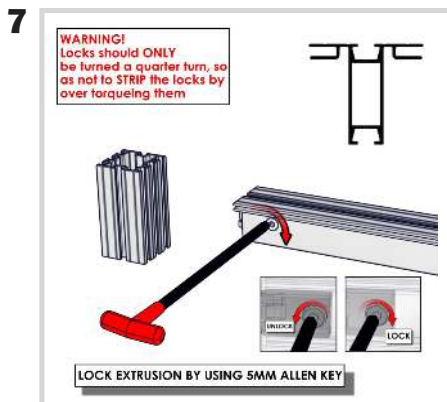Completed Step

Closet Assembly

For this step you will need:

PS-1200-1200

PM2S2-2400

LUM-LED2-ORL-B

9

PM2S2

Lock Panel by using
5mm T-Handle

Slide the lock panels into the PM2S2 then using the Allen-T lock the panels into place.

10

LUM-LED2-ORL LIGHT

1-

2-

Using the bottom clip attached to the light slip the plastic bottom into the chanel on top of the lock panel.

10

9

9

Completed Step

12
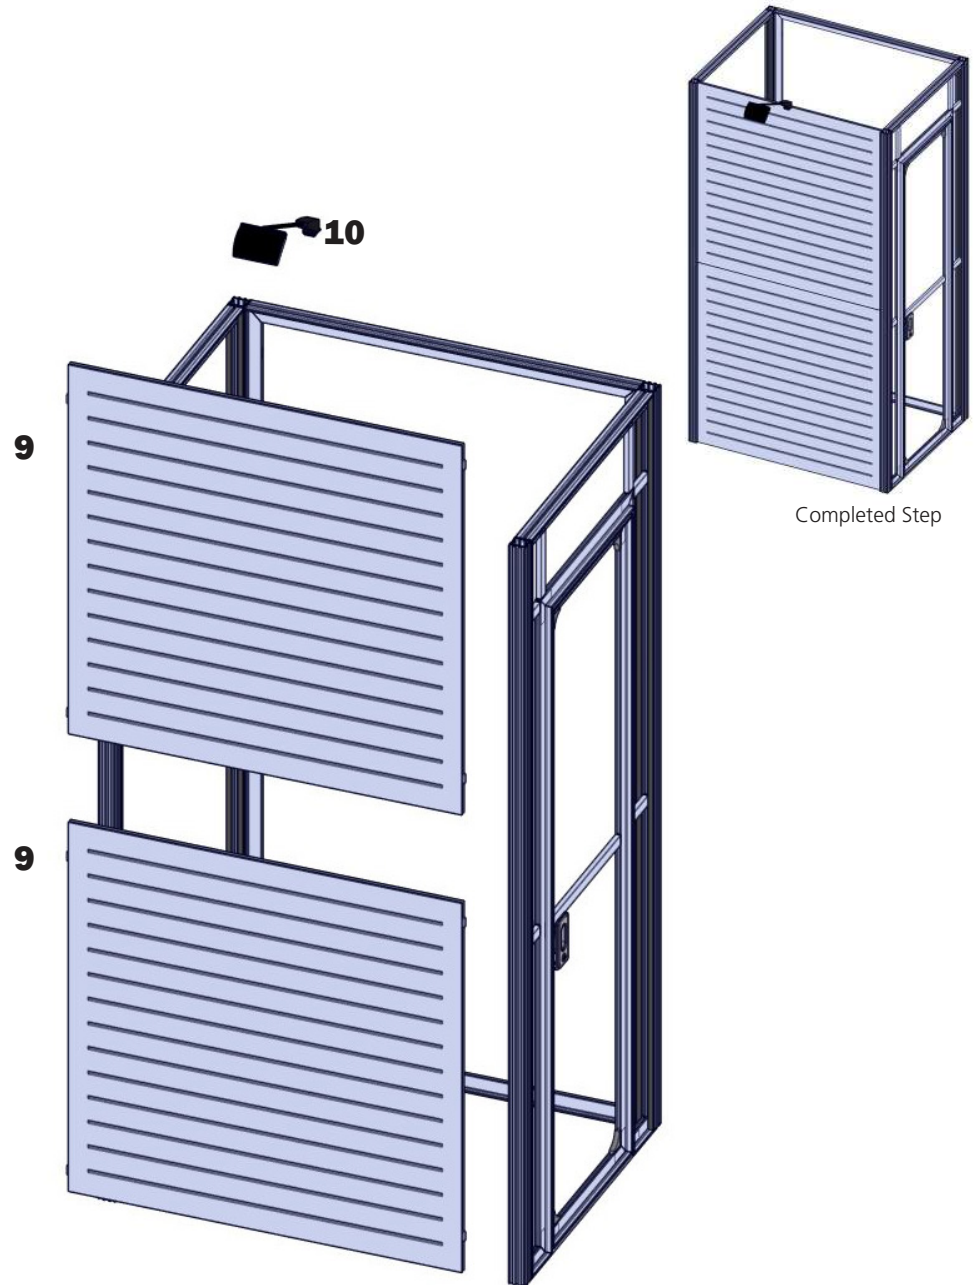
Closet Graphic Application

For this step you will need:

Exterior
VF-K-25-A-G
VF-K-25-B-G
VF-K-25-C-G

Interior
VF-K-25-I-G x1

11 FCE-2 TO PHFC2

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.
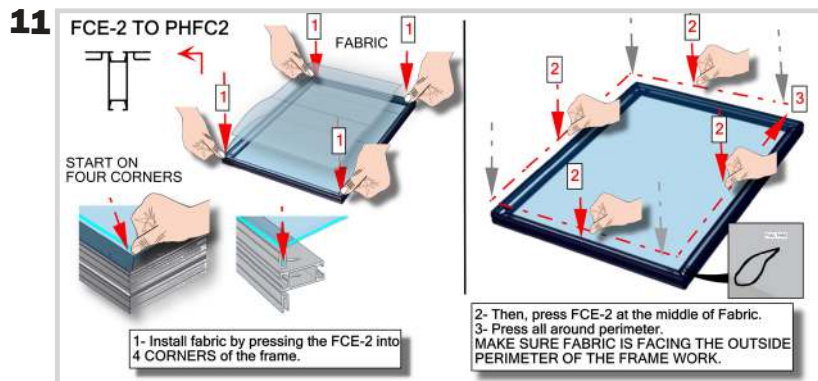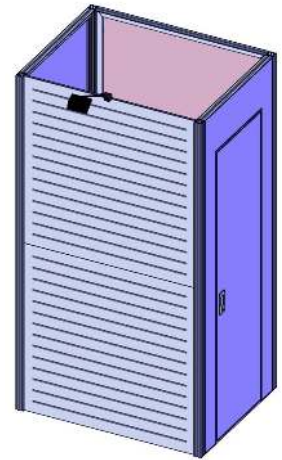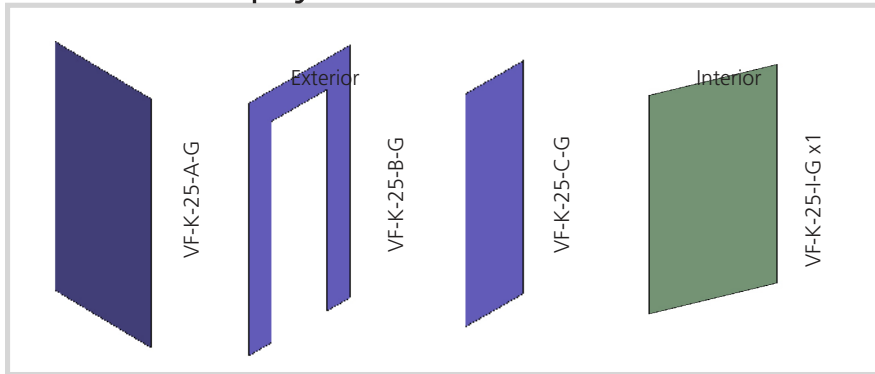
Place the FCE-2 part of the graphic into the outer channels of the PHFC2.

12 FCE-2 TO FC

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.
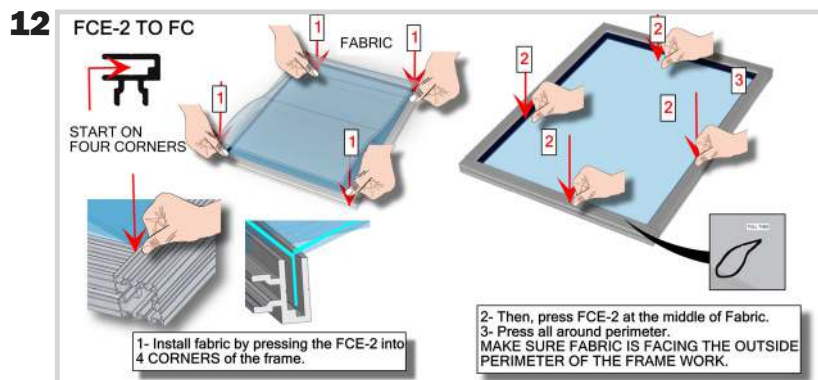
Place the FCE-2 part of the graphics into the FC channel that's attached to the PM2S2 extrusions.

Completed Step

11

12

12

Liner Application
For this step you will need:

VF-K-25-E-G

VF-K-25-G-G

VF-K-25-F-G

VF-K-25-H-G x1

13

FCE-2 TO PHFC2

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.

Place the FCE-2 part of the liner into the outer channels of the PHFC2.

14

FCE-2 TO FC

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.

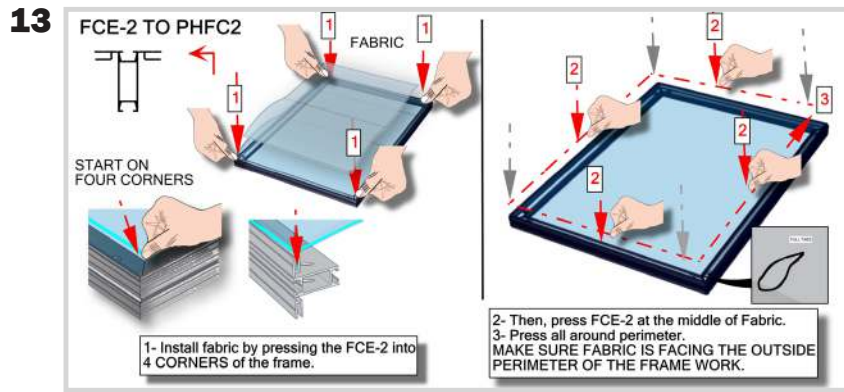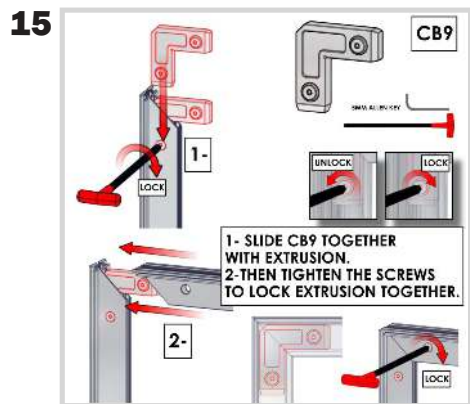Place the FCE-2 part of the liner into the FC channel that's attached to the PM2S2 extrusions.

Completed Step

13

14

14

Backwall Assembly

For this step you will need:

PHFC4-2400-MCB9-MCB9

PHFC2-1500-MCB9-MCB9

CB9

SW-FOOT-500-LN

15
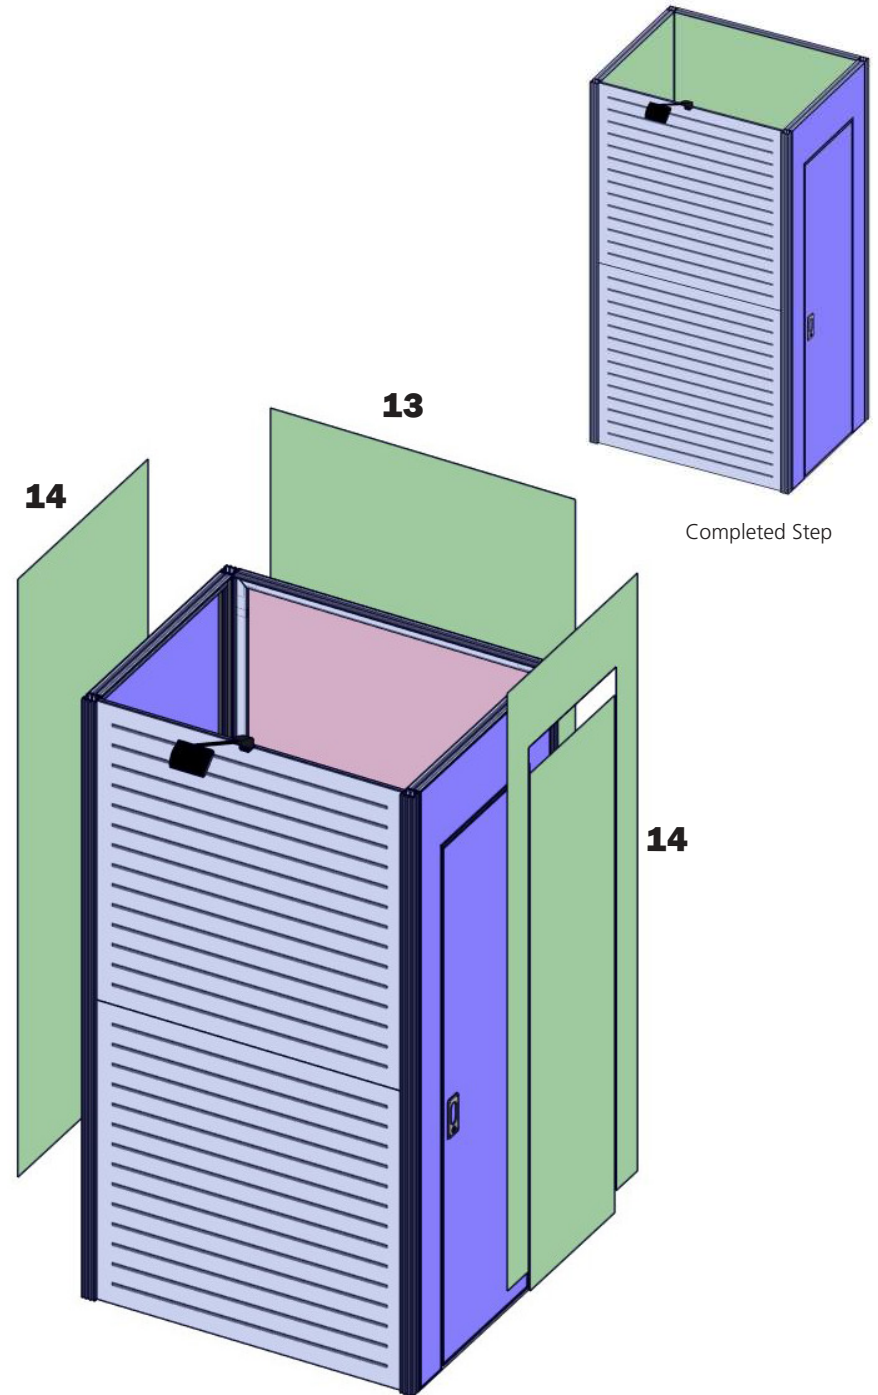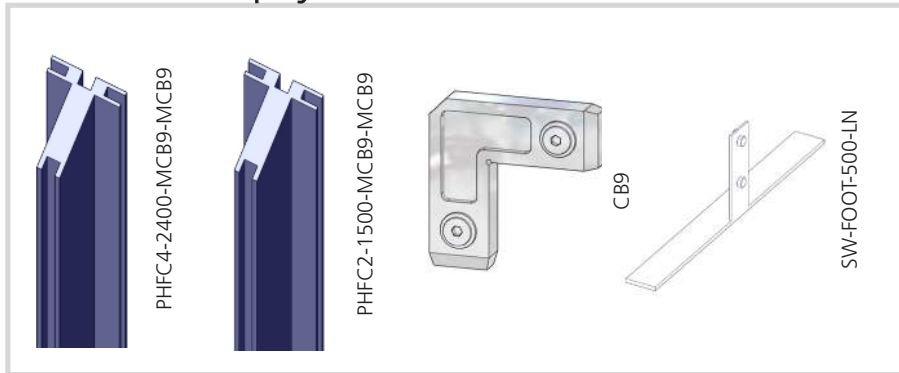
Attach the backwall together using the Allen Tool and the CB9 Connectors.

CB9

1- SLIDE CB9 TOGETHER WITH EXTRUSION.
2- THEN TIGHTEN THE SCREWS TO LOCK EXTRUSION TOGETHER.

16
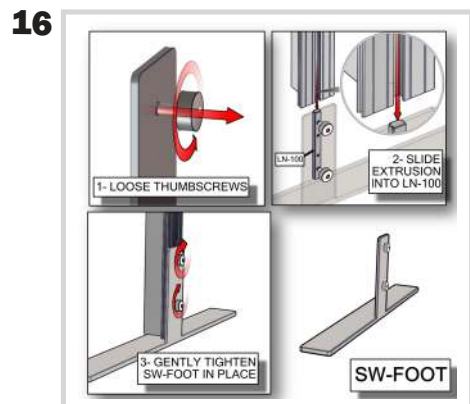
Slide the baseplate on the side of the extrusion in the channel then screw in place with the thumbscrew.

1- LOOSE THUMBSCREWS

2- SLIDE EXTRUSION INTO LN-100

3- GENTLY TIGHTEN SW-FOOT IN PLACE

SW-FOOT

15 PHFC2-1500-MCB9-MCB9

15

Completed Step

PHFC4-2400-MCB9-MCB9

PHFC4-2400-MCB9-MCB9

15

15 PHFC2-1500-MCB9-MCB9

15

16
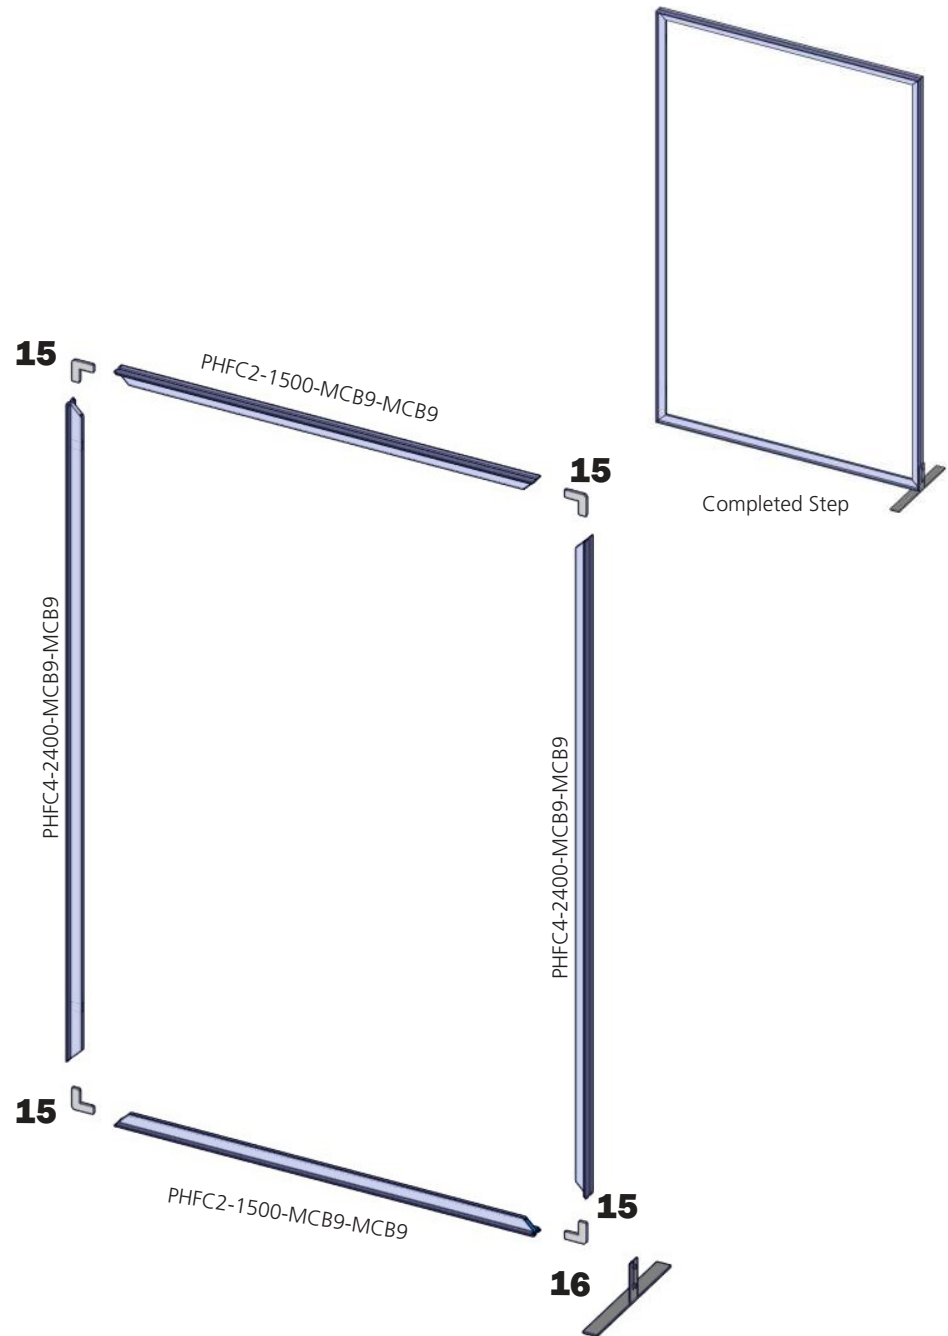
Closet and Backwall Assembly

For this step you will need:

PHFC4-2400-MCB9-MCB9

PM2S2-2400

Completed Step

PM2S2-2400

17

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.
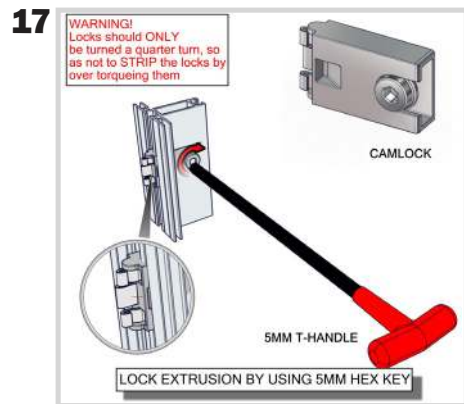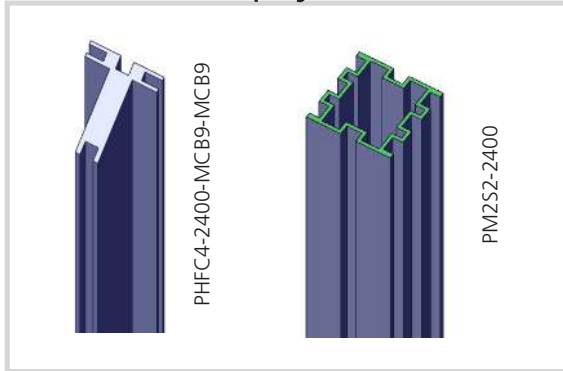
WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY
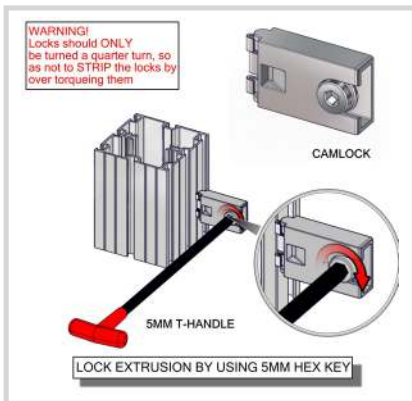
These will attach the PHFC2 to the side of the PMFC2. So you can connect your closet and backwall.

17

17

PHFC4-2400-MCB9-MCB9
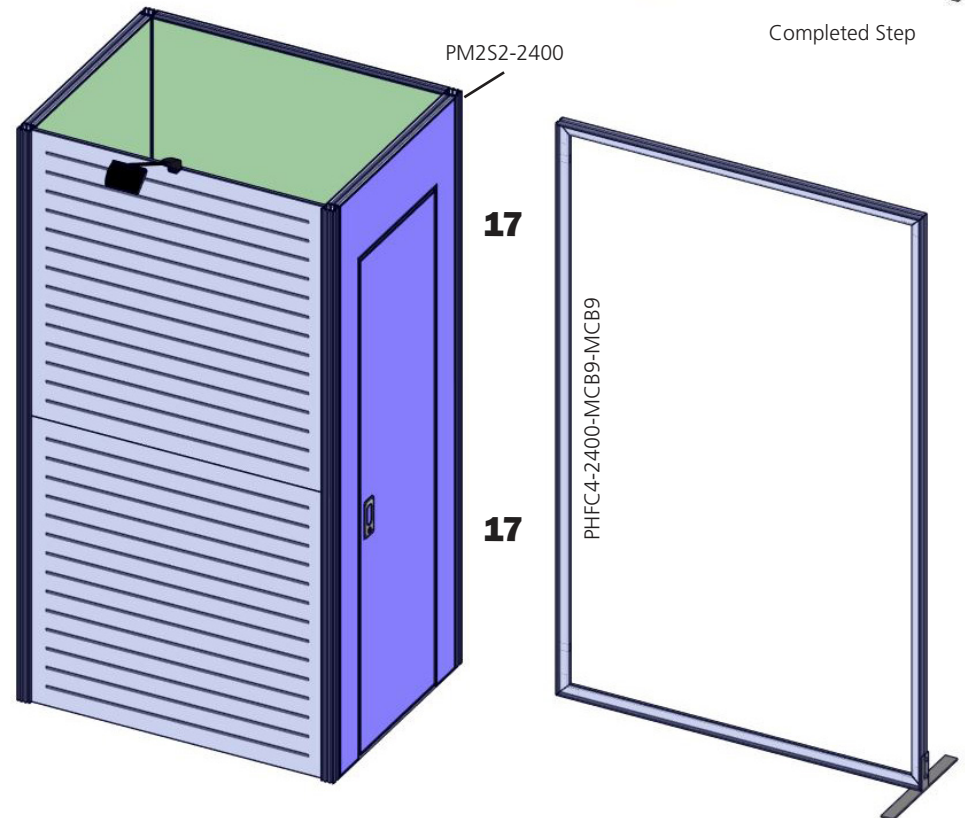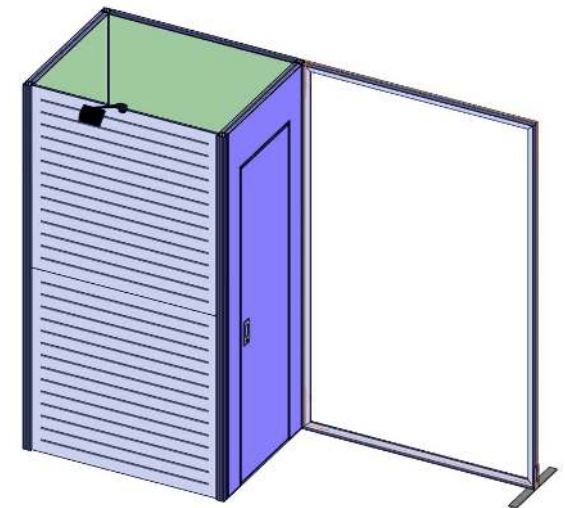
Backwall Graphic & Liner Application

For this step you will need:

VF-K-25-J-G

VF-K-25-D-G

18 FCE-2 TO PHFC2

FABRIC

START ON
FOUR CORNERS

1- Install fabric by pressing the FCE-2 into
4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE
PERIMETER OF THE FRAME WORK.
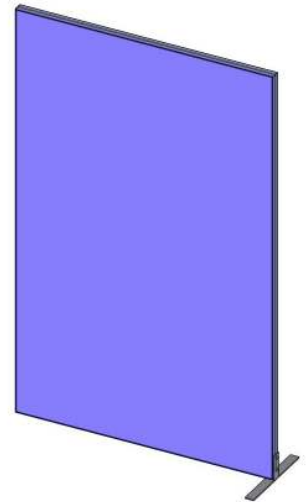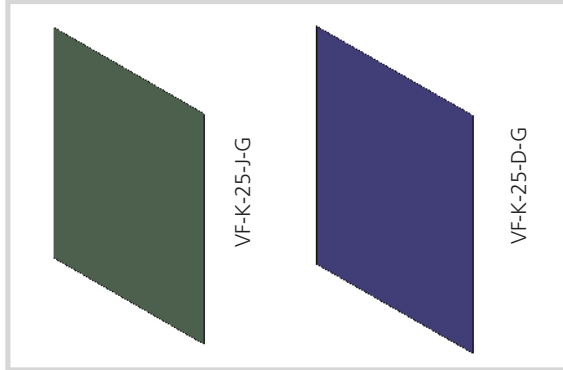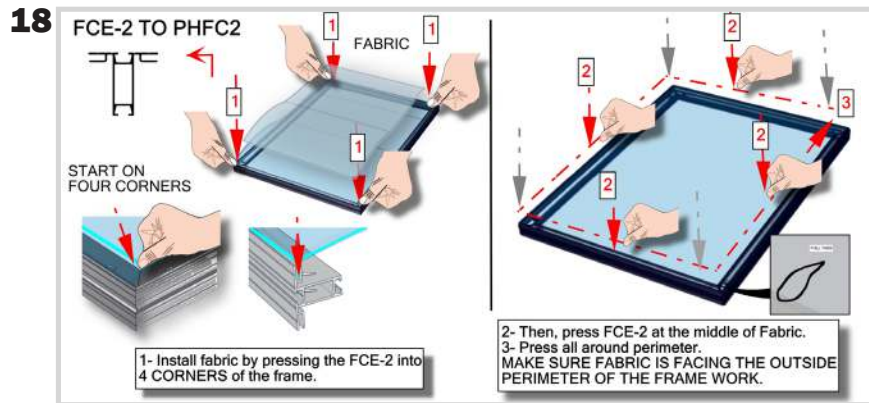
Place the FCE-2 part of the graphic and liner into the outer channels of the PHFC2.

Completed Step

18

18

Completing your Kit

To complete assembly see attached monitor mount instructions.
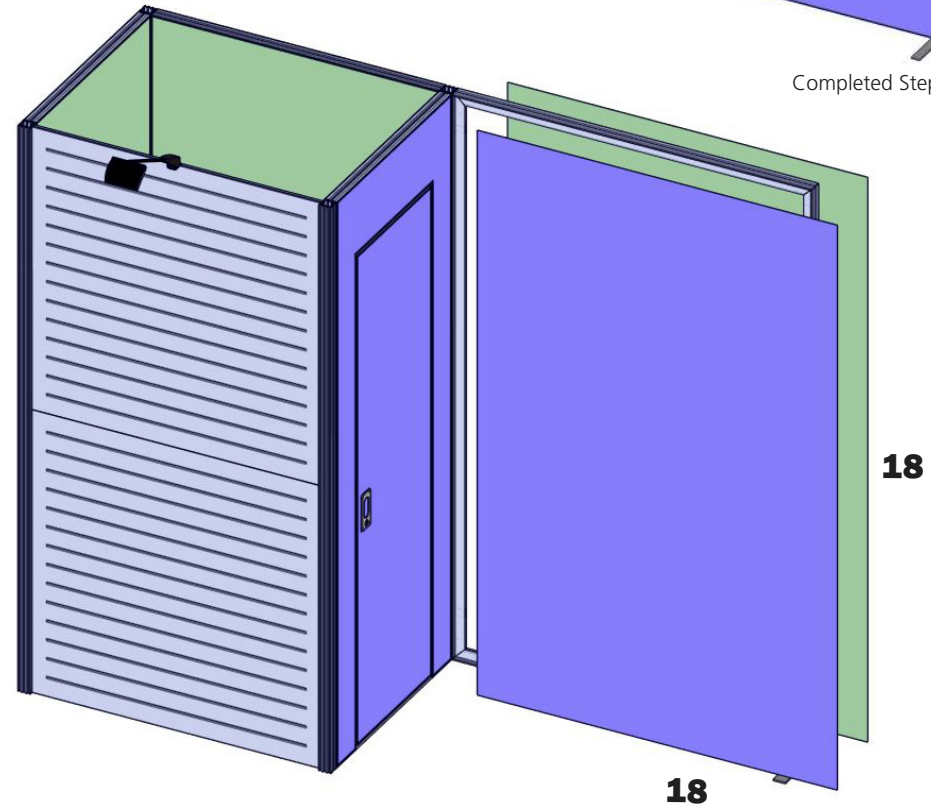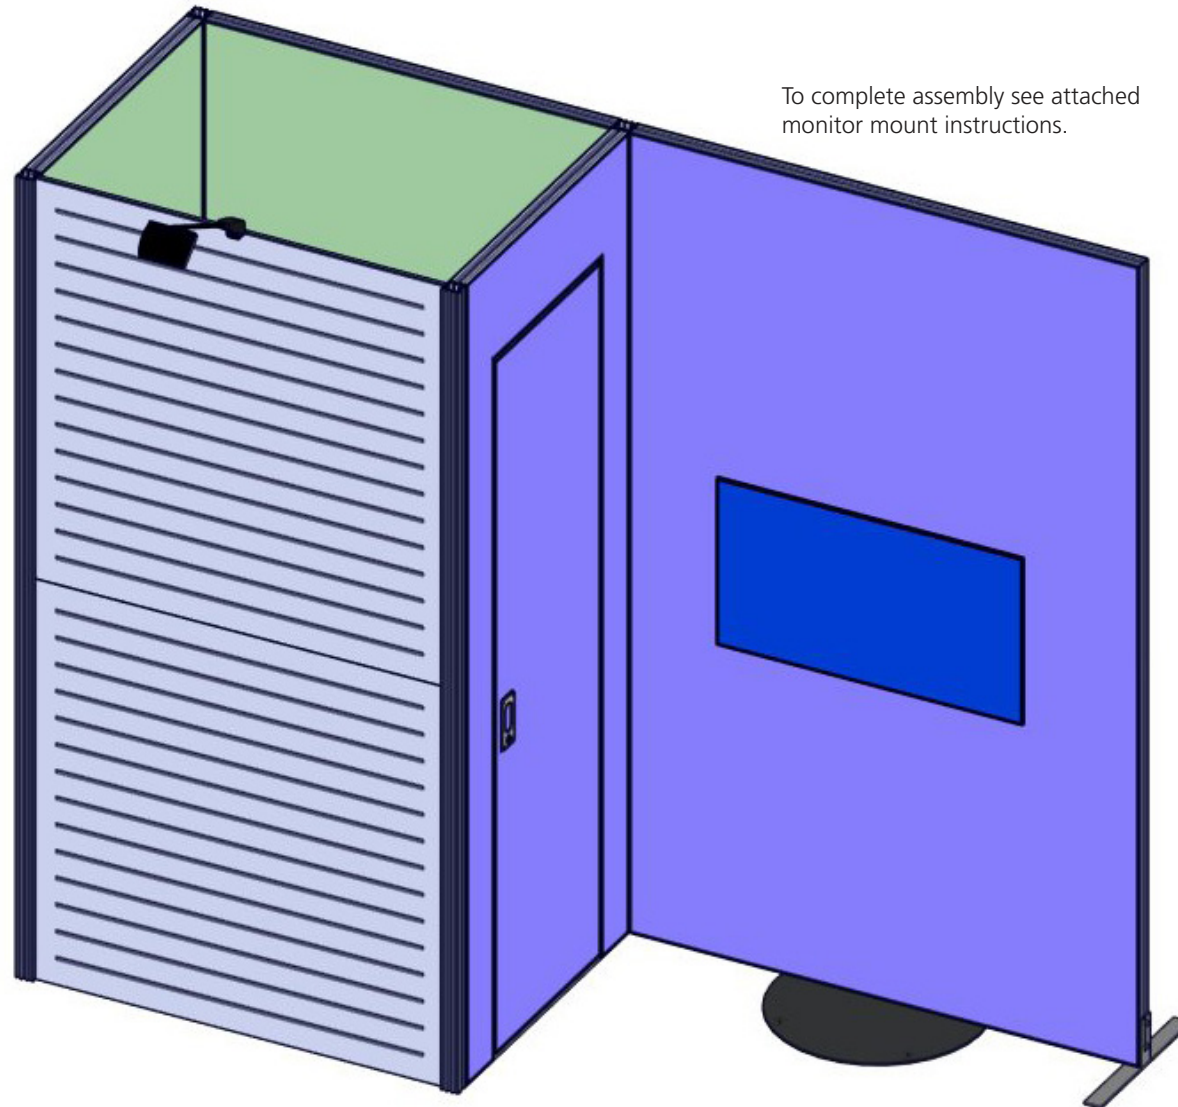
Free Standing Split Monitor Kiosk

FREESTANDING-SPLIT-MM-2

The Freestanding Moniitor Kiosk supports large screen LCDs and plasma flat panel monitors for use in trade show exhibits, at events and in all types of interior spaces. Video is an excellent way to show your large scale products, solutions and explain your services face to face. This elegant, stand-alone display supoorts a TV with a maximum weight of 40 lbs.

features and benefits:

- Standard black aluminum post and base
- Quick to set up
- Weighted base for added stability
- Supports large monitor 32-70""
- Max TV weight = 40 lbs
- Monitor not included

- Kit includes: Top pole, bottom pole, counter, base, monitor mount assembly
- Lifetime hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 26.25"w x 75.25"h x 23.56"d 667mm(w) x 1912mm(h) x 599mm(d) Approximate weight: 45 lbs / 21 kg	Refer to related graphic template for more information. Visit: www.exhibitors-handbook.com/graphic-templates

Shipping	additional information:
Packing case(s): 1 Box(es) Shipping dimensions: 34"l x 28"h x 7"d 864mm(l) x 712mm(h) x 178mm(d) Approximate total shipping weight: 50 lbs / 23 kg	When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided.

10/17/2019

Included In Your Kit
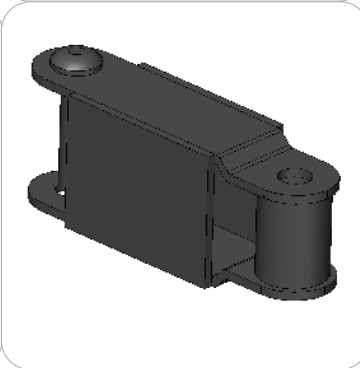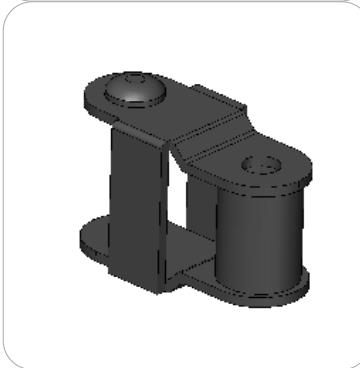
TOP POLE x1

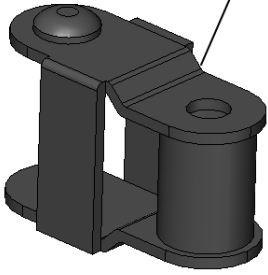BOTTOM POLE x1

COUNTER x1
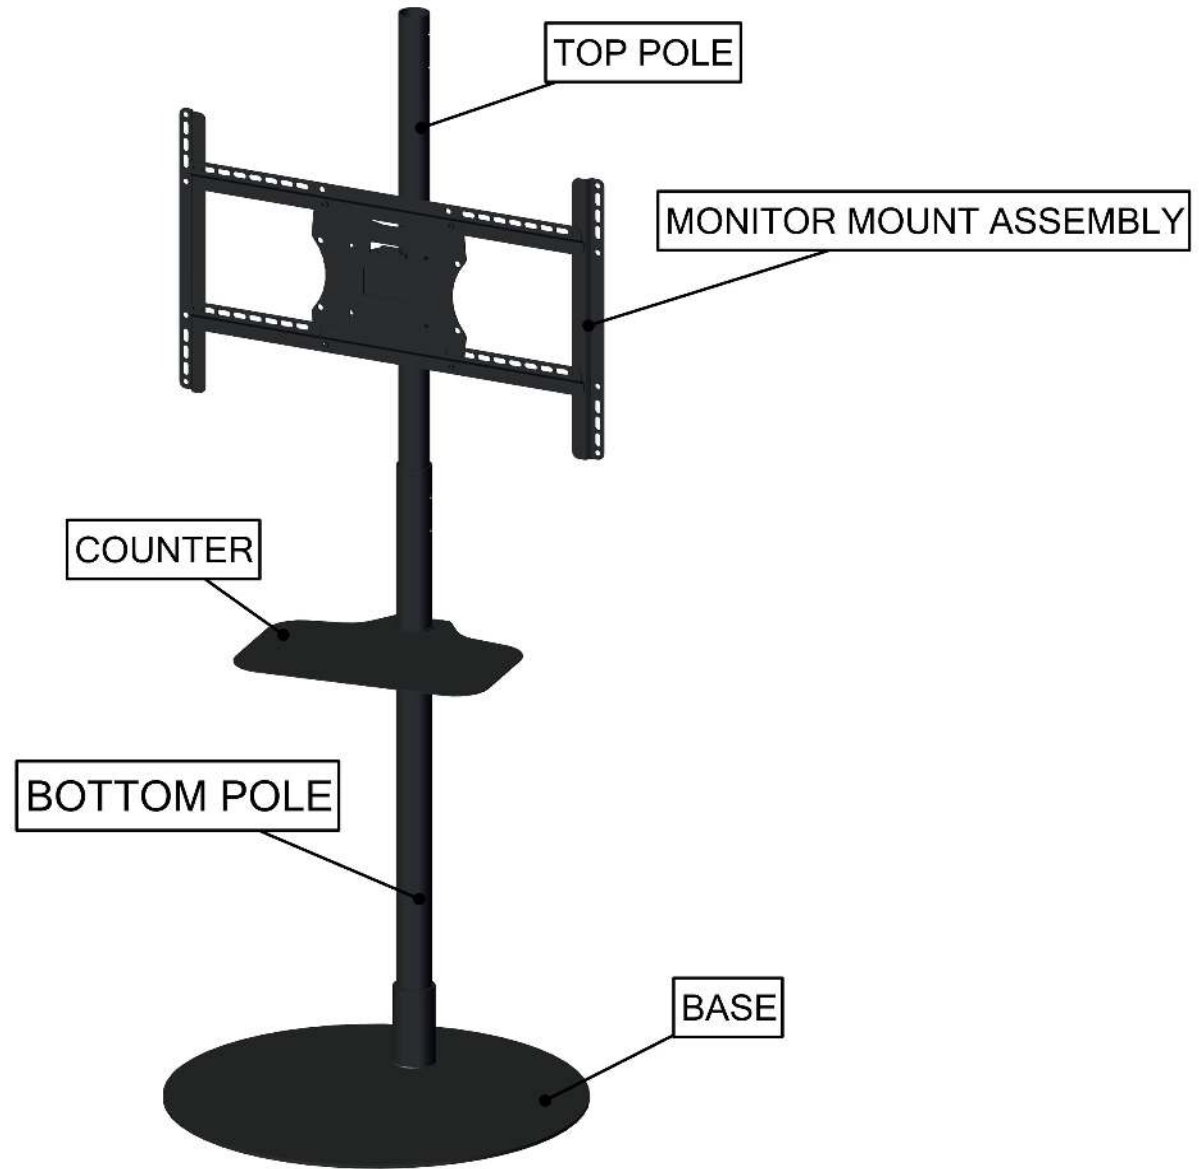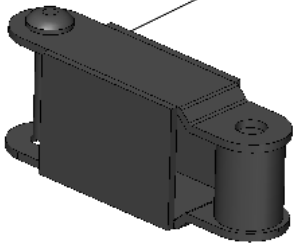
FREESTANDING-SPLIT-EXT-2 x1

FREESTANDING-SPLIT-EXT-4 x1

Exploded Diagram

FREESTANDING-SPLIT-MM-2

FREESTANDING -SPLIT-EXT-2

FREESTANDING-SPLIT-EXT-4

TOP POLE

MONITOR MOUNT ASSEMBLY

COUNTER

BOTTOM POLE

BASE

Kit Assembly

Step by Step

Step 1.

Gather the components to build the bottom section. Use the Exploded View for part labels.

Step 2.

Gather the components to build the top section. Use the Exploded View for part labels.

Step 3.

Gather the components to install counter. Use the Exploded View for part labels.

ADJUST TO DESIRED MEASUREMENT

Step 4.

Gather the components to attach monitor bracket. Use the Exploded View for part labels.

Reference Connection Method(s) 1 for more details.

GROMMET HOLE FOR CORDS

Kit Assembly

Step by Step

Step 5.

Gather the components to build the monitor supports. Use the Exploded View for part labels.

Step 6.

Gather the components to attach supports to the monitor. Use the Exploded View for part labels.

Step 7.

Setup is complete.

Step 8.

2"& 4" EXTENTION HARDWARE

The extention parts help extend monitor 2" or 4" out from the stand, if needed for placement behind display or any other obstruction. More dietails follow this page.
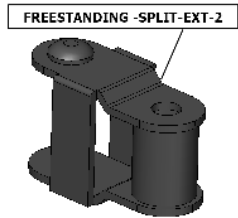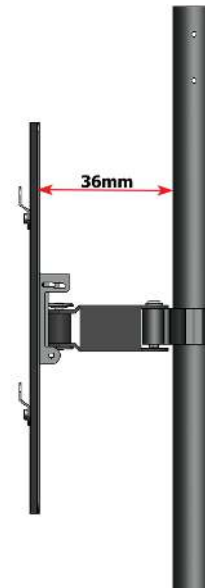
FREESTANDING -SPLIT-EXT-2

FREESTANDING-SPLIT-EXT-4

Kit Assembly

Step by Step

Step 9.

Gather the components to attach 2" monitor supports. Use the Exploded View for part labels.

FREESTANDING -SPLIT-EXT-2

10MM

Step 10.

Gather the components to attach 4" supports to the monitor. Use the Exploded View for part labels.
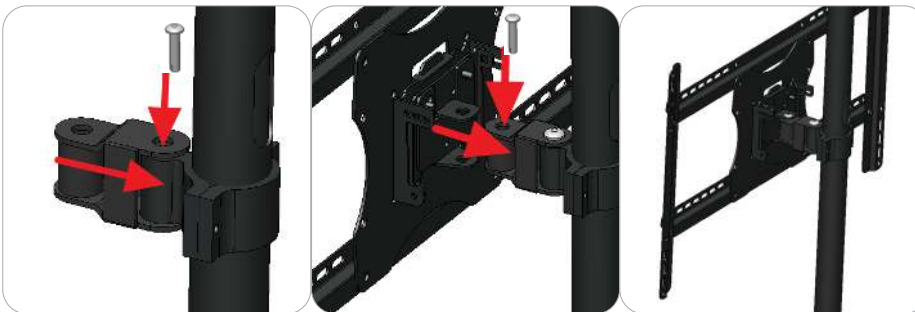
FREESTANDING-SPLIT-EXT-4

36mm
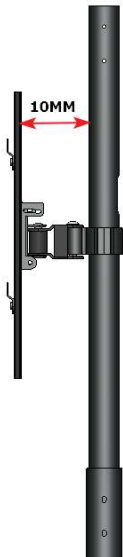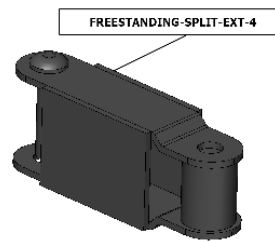
Connection Methods

Connection Method 1: ATTACH MOUNT TO STAND

First, attach bracket to stand using both hands to hold in place. Once front and back brackets are lined up, insert bolts. Tighten to ensure monitor mount does not move. Do not over tighten, may damage stand or hardware. Monitor should be attached last. Do not try to attach brackets with monitor attached. This may lead to damaging monitor or injury.

Connection Method 2: ATTACH 2" FREESTANDING-SPLIT-EXT-2

First, attach bracket to stand using both hands to hold in place. Once front and back brackets are lined up, insert bolts. Tighten to ensure monitor mount does not move. Do not over tighten, may damage stand or hardware. Monitor should be attached last. Do not try to attach brackets with monitor attached. This may lead to damaging monitor or injury.

Connection Method 3: ATTACH 4" FREESTANDING-SPLIT-EXT-4

First, attach bracket to stand using both hands to hold in place. Once front and back brackets are lined up, insert bolts. Tighten to ensure monitor mount does not move. Do not over tighten, may damage stand or hardware. Monitor should be attached last. Do not try to attach brackets with monitor attached. This may lead to damaging monitor or injury.